




# Checking Number of Devices Connected via WiFi on Alcatel ONT

**Step 1:** Open Web browser and type 192.168.2.254 on address bar. Authentication Required pop up will appear

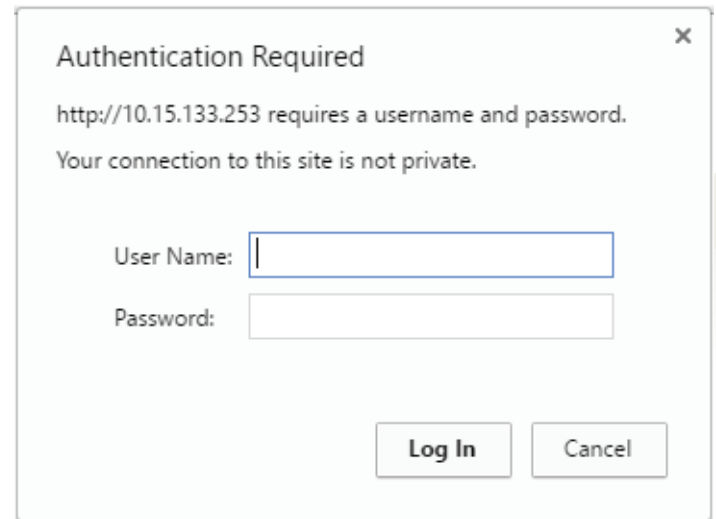


Authentication Required

http://10.15.133.253 requires a username and password.  
Your connection to this site is not private.

User Name:

Password:

**Step 2:** Type 'admin' in User Name field and 'admin' in Password (as default credentials unless they are changed) field and click on Log In button"

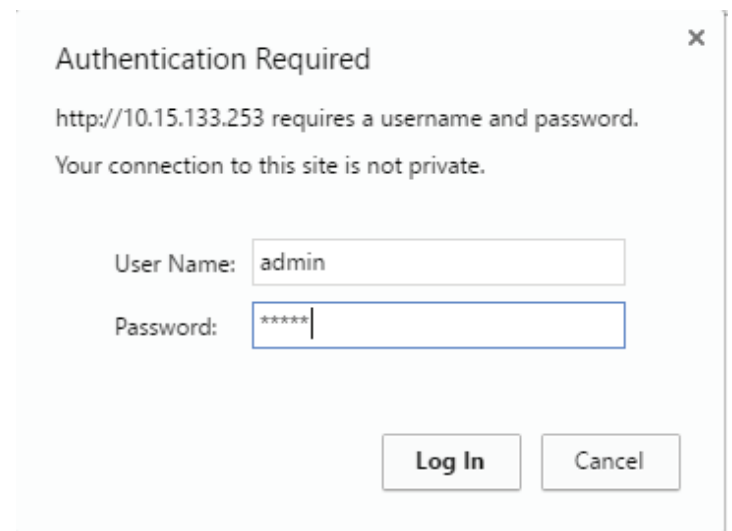


Authentication Required

http://10.15.133.253 requires a username and password.  
Your connection to this site is not private.

User Name:

Password:

**Step 3:** Click on RGW tab:

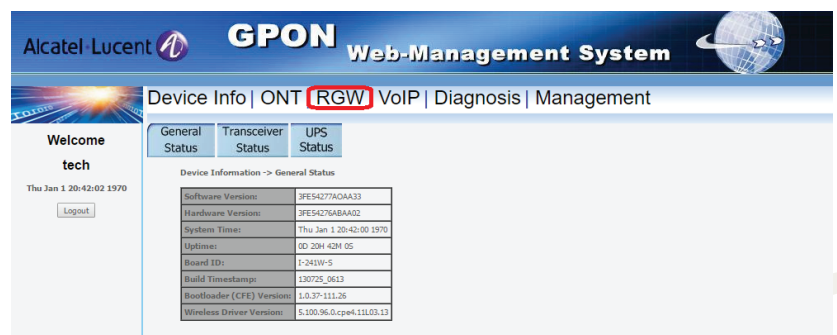

Alcatel-Lucent **GPON** Web-Management System

Device Info | ONT | **RGW** | VoIP | Diagnosis | Management


Welcome tech  
Thu Jan 1 20:42:02 1970

General Status | Transceiver Status | UPS Status


Device Information -> General Status

Software Version:	3FE542770AA33
Hardware Version:	3FE54276ABA02
System Time:	Thu Jan 1 20:42:00 1970
Uptime:	00:20:42:00:05
Board ID:	1-241W-S
Build Timestamp:	130725_0613
Bootloader (CFE) Version:	1.0.37-111.26
Wireless Driver Version:	5.100.96.0.cpe4.111.03.13

**Step 4:** Click on WLAN sub tab:

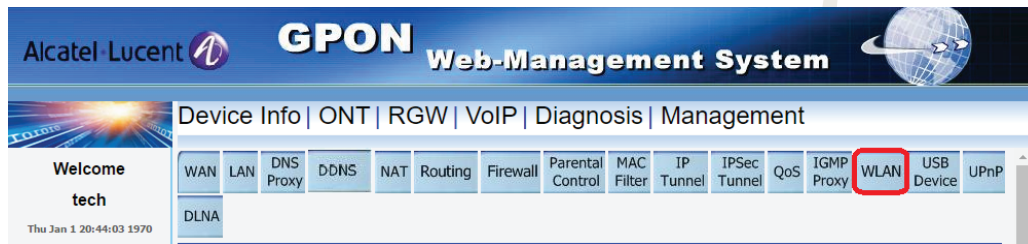

**Step 5:** Click on Station Info subtab

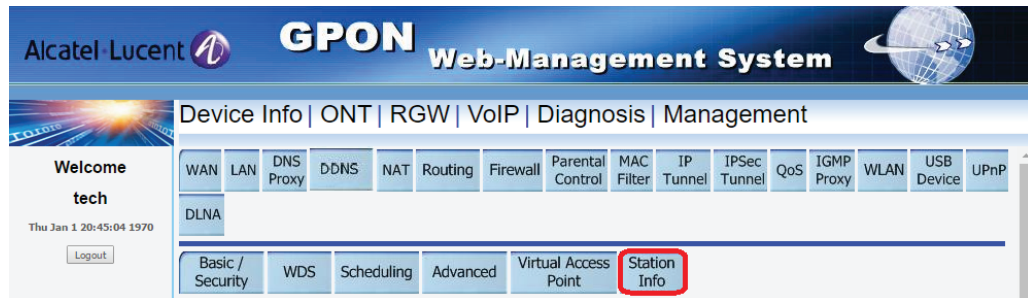

**Step 6:** Devices that currently are connected via WiFi will be shown:

