



User Manual



Preface

This manual is intended for new users with little or no experience of using the Nayatel JoyBox interface. The goal of this document is to give a broad overview of the main functions of JoyBox and some basic instructions on how to setup it. This document will concentrate on demonstrating interaction with JoyBox along with the TV/Remote interface. In order to guarantee your safety during operation and protect this player and its accessories, please read this operation manual carefully before using it.

Statements

We have made every possible effort to provide the most current information about the product. We do not guarantee that following information is up to date. We reserve the right to introduce amendments, changes or translations of the user manual without prior notification. For this reason, we recommend you to regularly visit our website in order to obtain the latest information.

Table of Content

1 Features	1
1.1 Key Features	1
1.2 Environment for System	1
1.3 Package Content	1
2 Remote Control	2
3 System Configuration	3
4 Joybox Interface	4
4.1 Activation	4
4.2 Home Screen	4
4.3 My apps	5
4.4 Live TV	5
4.5 Add/Remove channels into favorite list	6
4.6 Search Channel	6
4.7 Parental Control (LIVE)	7
4.8 Timeshift	8
4.9 VOD	8
4.10 Watch Video	9
4.11 Playback Options	9
4.12 Search Video	10
4.13 Parental Control (VOD category)	10
4.14 Unlock VOD Category	11
4.15 Application Update	11
5 Settings	12

Chapter 1 Features

1.1 Key Features

- Android 6.0.1 operating system with ARM Cortex A53 Quad Core CPU 2GHz and Penta Core GPU with Mali 450
- Bundled with Analog, Digital and HD TV channels.
- Bundled with 1000s of VOD movies, TV series, documentaries and shows.
- Support four main HD formats: VC-1, H.264, H.265, MPEG-2 and many others normal formats as MPEG-1, MPEG-2, MPEG-4, DIVX, REALMEDIA and so on.
- Video formats include AVI, MPG, VOB, RMVB, MKV, M2TS, and TS and so on.
- Photo formats include JPEG, BMP, and PNG without size limitation.
- Audio formats include MP3, WMA, WAV, AC3, DTS, AAC and so on.
- Support Micro SD cards.
- Support two USB 2.0 connectors with maximum output current of 1.5A.
- Support standard RJ45 cable network connection and wireless network connection.

1.2 Environment for System

Operation : Temperature limitation: 0–40°C ; Humidity limitation: 20–80%

Storage : Temperature limitation: -20–50°C; Humidity limitation: 10–90%

1.3 Package Content

Accessories	Quantity
Remote Control	1
HDMI Cable	1
User Manual	1
Power Adaptor	1

Chapter 2 Remote Control

 POWER: Press to turn/off.

 APP: Fast key to go to android application.

 VOL- VOL+ VOL: Press to increase/decrease the volume.

 HOME: Fast key to go back to main menu.

 RETURN: Press to return back to previous menu.




Navigation: Press to navigate left/right/up/down. Press OK to confirm your choice.

Press on the left navigation key to open the channels list bar.
Press on the right navigation key to open the DVR list for DVR channels


On channel name in the channel list bar, long press on OK key to add the selected channel into favorites list.

On channel name in the Favorites channel list bar, long press on OK key to remove the selected channel from favorites list.

 MENU: Press to choose function menu of corresponding application in video, music, photo and website.

 


 Number keypad 0-9: Press to input Arabic number.

 MUTE: Press to turn down the volume.

 Backspace: Press to back.

Chapter 3 System Connection

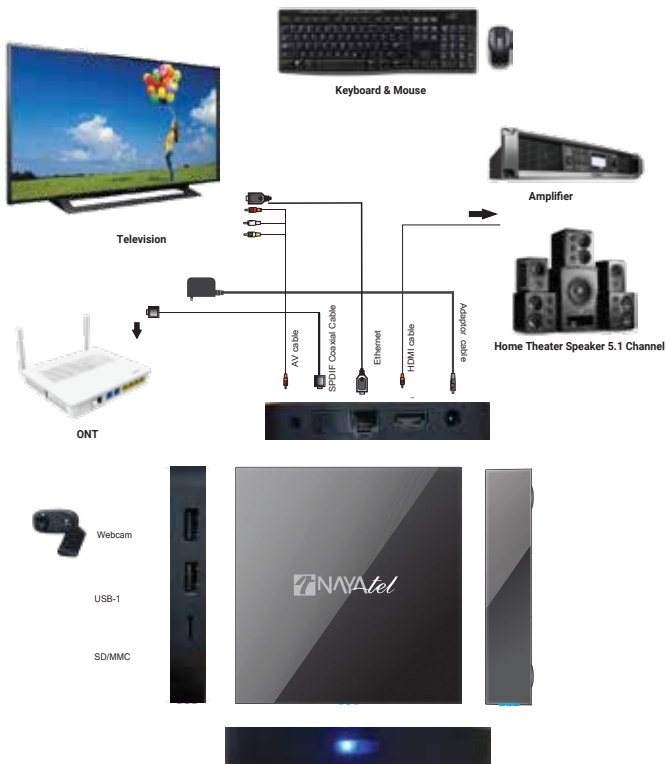

Chapter 4 JoyBox Interface

4.1 Activation



Enter JoyBox "Activation code" sent by Nayatel on your registered email and mobile number and select "Register" button for one time activation of JoyBox.

4.2 Home Screen



Navigate through Home screen menu by using arrow keys and press OK in order to open desired section.

4.3 My apps



Apps screen shows bundled apps. Navigate with arrow keys and press OK key to open desired app. You can also download and install more supported apps from Google Play Store or Aptoide.

4.4 Live TV



Navigate with arrow keys to Live TV menu item on home screen and press "OK" key to open Live TV channels. Press "Left Arrow" key to open channel list bar.

4.5 Add/Remove channels into favorite list




On channel name in the channel list bar, long press "OK" key to add or remove selected channel into favorites list.


4.6 Search Channel



Select the Q "search icon" on the top of channels list bar in LIVE section to search the channel by name. Use on screen keyboard for typing and press "OK" or Enter key on onscreen keyboard in order to search.

4.7 Parental Control (LIVE)

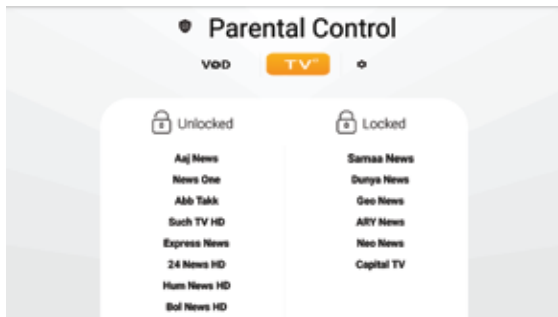


Navigate to  "Lock icon" on home screen and press "OK" to manage Parental Control. Setup "Parental Control" password which will be used to play locked channel. Manage locked/unlocked channels in Live tab.



While on Live section, enter password to play locked channel.

4.8 Timeshift



Timeshift option is available on some Live TV channels which can be used by pressing right arrow key while watching timeshift channel.  Icon along with channel number indicates timeshift channels.

4.9 VOD




Navigate with arrow keys to "VOD" menu item on home screen and press "OK" key to open VOD library. Browse through categories and video titles using "arrow keys" and press "OK" key to open selected video.

4.10 Watch Video

The screenshot shows the VOD interface for the TV show "Gotham". At the top left is a large poster for "STUPID INMEXOL CRAZY STUPID LOVE". To its right, the show's title "Gotham" is displayed with an IMDb rating of 7.9/10. Below the title, it says "TV-14 | 42 min | 5 Seasons | 22 Sep 2014". The stars are listed as "Ben McKenzie, Donal Logue" and the directors as "N/A". The current season is "Season 3". The episode title is "Episode No. 02: Mad City: Burn the Witch". Below this, there are five smaller posters for other episodes, each with an IMDb rating. At the bottom, there are two buttons: "OVERVIEW" and "ADD TO FAVORITES".

Next screen show options to "Resume" video already watched, "Watch Movie" if you want to watch video from beginning or "Add to Favorites" to add selected video into VOD favorites list.

4.11 Playback Options

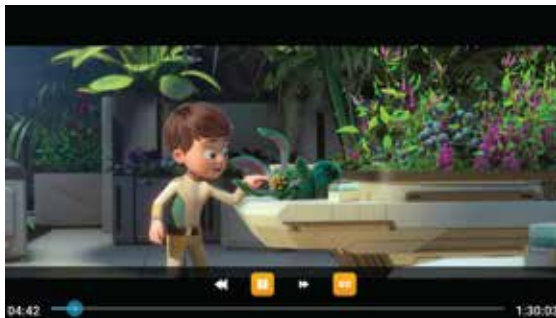

While playing video, you can use various playback options such as timeline control, Step forward, Step backward and enable/disable subtitles.

4.12 Search Video

The screenshot shows the VOD search interface. At the top, there is a search bar with the text "3 Blue Pearls, Green Tea". Below the search bar, there is a grid of 10 video thumbnails. Each thumbnail has an IMDb rating in the top left corner. The thumbnails are for the following titles: "BLOOD BOSS" (IMDb 1.9), "HANGOVER" (IMDb 7.2), "3" (IMDb 6.7), "money HUNTS" (IMDb 5.8), "REAR VIEW" (IMDb 6.3), "BLOOD BOSS" (IMDb 1.9), "HANGOVER" (IMDb 7.2), "3" (IMDb 6.7), "money HUNTS" (IMDb 5.8), and "REAR VIEW" (IMDb 6.3).

Navigate to "Search" icon on top of Categories list and press "OK" key to open search interface. Type video title and press "enter" to search from VOD library.

4.13 Parental Control (VOD category)

The screenshot shows the "Parental Control" settings screen. At the top, there is a "VOD" tab and a "TV" tab. Below the tabs, there are two toggle switches: "Unlocked" (which is currently turned on) and "Locked" (which is currently turned off). Below the switches, there is a list of content categories: Adventure, Comedy, Drama, Family, Action, Crime, Thriller, and Romance. Each category has a corresponding lock icon next to it.

Navigate to "Lock icon" on home screen and press "OK" to manage Parental Control. Setup "Parental Control" password which will be used to open locked VOD category. Manage locked/unlocked categories in VOD tab.

4.14 Unlock VOD Category



Locked category will prompt for "Parental Control Password" you defined in Parental Control Settings.

4.15 Application Update



Select the  "update" icon on the Home screen to update the application

Chapter 5. Settings



Navigate to Apps > Settings and press "OK" key to open Settings section. Settings will allow you to adjust System settings related to Device, Preferences, Remote & Accessories.



Navigate to Apps > Update&Backup and press "OK" key to open app. Move selection to "Backup" and press "OK" key to backup devices settings and data. Move selection to "Online update" and press OK key to check if online update is available. Follow onscreen instructions to update your firmware.

DO NOT FACTORY RESET
THIS DEVICE
CALL SUPPORT FOR FURTHER
ASSISTANCE